
How to use this template:


1. Print "**Actual size**" (no scaling) with paper size set to Letter Landscape.
2. Glue this page onto a suitable piece of cardboard.
3. Cut along the outline below. *This includes a 0.1" clearance gap required for the brake system to fit under your wheel.*
4. Remove a wheel and lay it face down.
5. Fit the "Wheel Spigot" section into your wheel's center hole.
6. Check that the template cutout clears the wheel surfaces to ensure sufficient clearance for the new brake system. *Take careful note of balancing weights.*

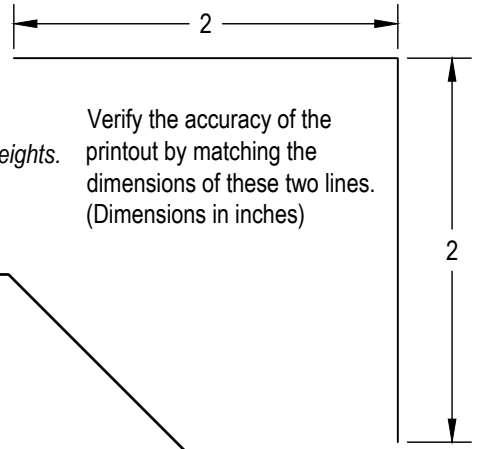

Verify the accuracy of the printout by matching the dimensions of these two lines. (Dimensions in inches)

POWERBRAKE

Powerbrake: X6L / 370x34mm
Vehicle: Toyota Tundra (Gen 2), Land Cruiser 200 & Lexus LX 570
Platform: TOY05F & TOY09F

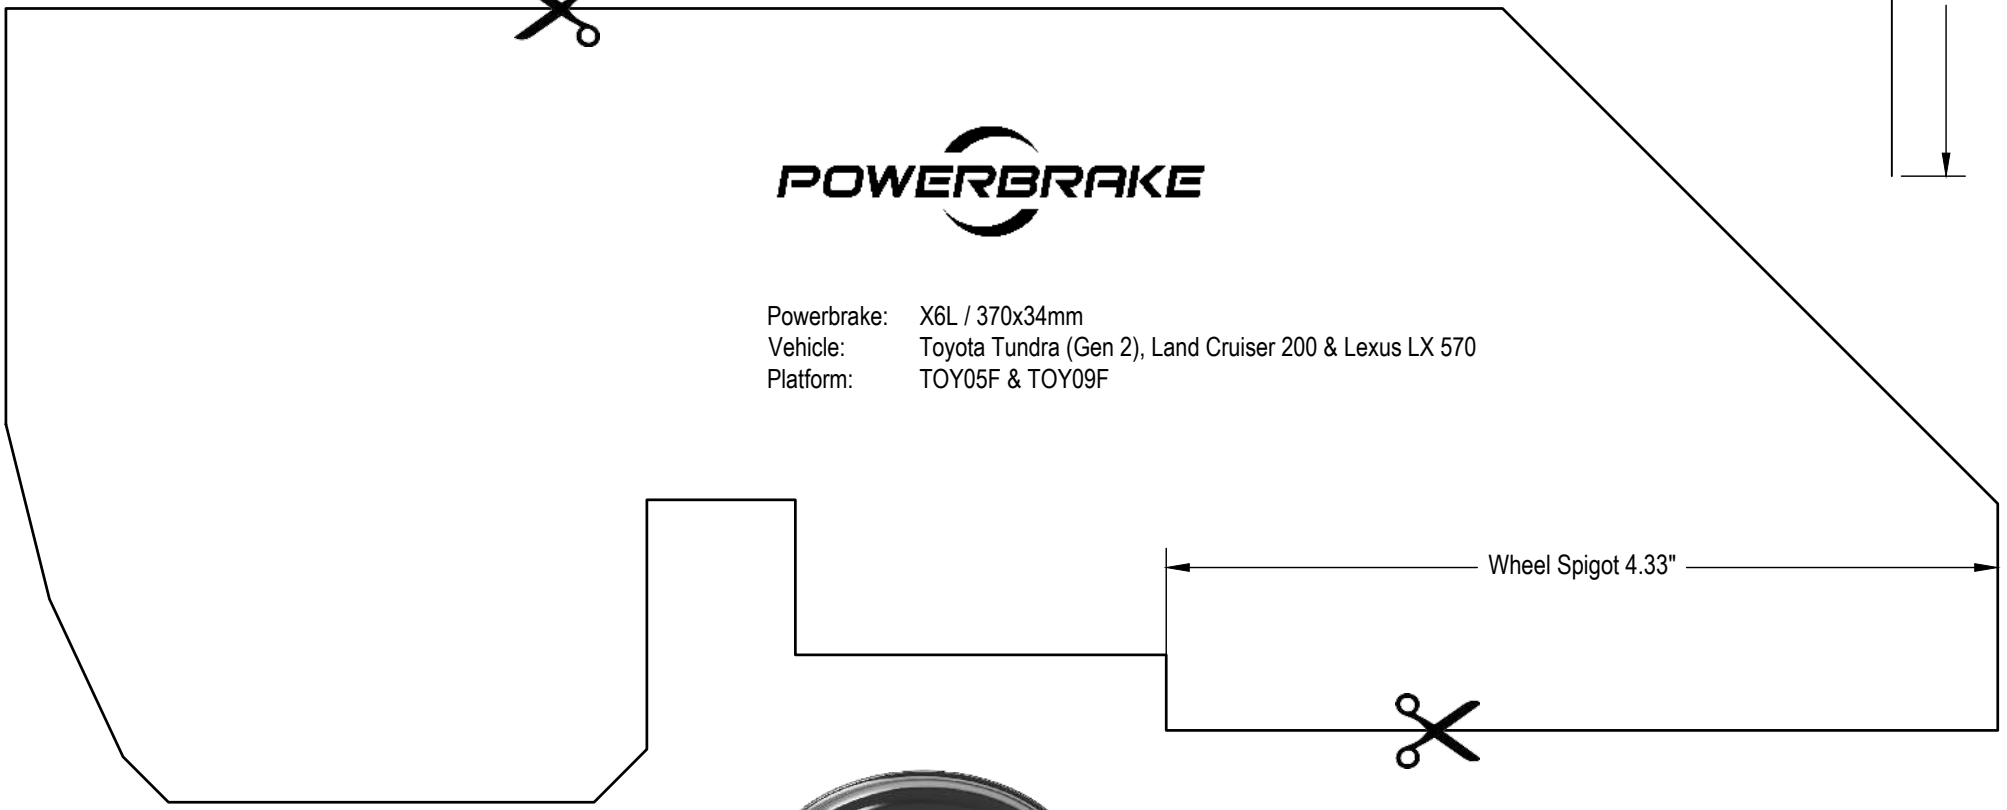



POWERBRAKE	www.powerbrakeglobal.com
WHEEL FITMENT TEMPLATE	
VEHICLE:	Toyota Tundra (Gen 2), Land Cruiser 200 & Lexus LX570
KIT TYPE:	X6L / 370x34mm
PLATFORM:	TOY05F & TOY09F
It is critical to accurately check wheel clearance with this template before purchasing your Powerbrake kit.	